


### 3 Memory Bank Account Calculator

OWNER'S MANUAL —
Please read before using this equipment.

**65-504** A

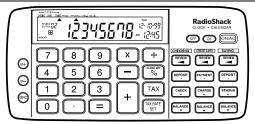

Three Separate Memories — Keep track of your checking, credit card, and savings account balances.

Heavy-Duty Carry Case — Slots for your credit cards, check book, and pen.

Balance Function — Shows the current balance in any account at the touch of a button.

Review Function — Check the last 20 entries in your checking, credit card, or savings account.

# IMPORTANT I If an icon appears at the end of a paragraph, go to the box on that page with the corresponding icon for pertinent information. I — Important Caution Note

© 2002 RadioShack Corporation. All Rights Reserved. RadioShack and RadioShack.com are trademarks used by RadioShack Corporation.

#### **CONTENTS**

CONTRICT
Preparation 2
Resetting the
Calculator 3
Operation 4
Basic Operation . 4
Setting the Time 4
Calculations 5
Standard
Calculations 5
Percentage
Calculations 6
Errors 6
Constant
Calculations 7
Memory
Calculations 7
Account Functions . 8
Checking 9
Credit Card 10
Saving 11
Tax Functions 12
Replacing the
Batteries 13
Specifications 15

Thank you for purchasing the RadioShack 3 Memory Bank Account Calculator. It makes balancing your checkbook quick and easy! It keeps track of your checking account as you deposit or withdraw money, and lets you perform additional calculations without disturbing your account balance.

### **PREPARATION**

- 1. Insert your checkbook register in the pocket below the calculator.
- 2. Put your checkbook in the slot below the calculator.
- 3. Place your credit cards in the slots provided.
- 4. Grasp the end of the protective insulation strip and gently pull it out.

### RESETTING THE CALCULATOR

If your calculator does not appear to be working correctly, reset it by pressing a straightened paper clip or other pointed object into the **RESET** hole on the back of the calculator.

You may also reset the calculator without losing any saved information using the following sequence.

- Hold down CLOCK SET % for about three seconds until the first digit of the month flashes.
- 2. Reset the month, date, year, and time.
- 3. Press **CLOCK SET %**, then press **x**.
- 4. Press =. All the balance records, date, and time

CAUTION W

This deletes all account records, resets the date to 1-01-00, and returns the clock to 0:00 on a 24-hour format.

remain unchanged and the calculator returns to normal operation.

### **OPERATION**

#### **BASIC OPERATION**

- Press ON/AC to turn on the calculator, or to clear an old calculation and start a new one.
- Press CE to clear an incorrect entry before you press an operation key, or to clear errors.
- 3. Press **OFF** to turn off the calculator.  $\bigvee$

### SETTING THE TIME

 Hold down CLOCK SET % about three seconds, until the first digit of the month flashes.

your calculation.

4

- Press + to select 12- or 24-hour format. Rm or Pm
  appears to the left of the time to indicate 12-hour format. Press to toggle between AM and PM in 12-hour format.
- 3. Enter the correct month, date, year, and time, then press =. 💢

### **CALCULATIONS**

### STANDARD CALCULATIONS

Press the keys in the order they appear in the arithmetic operation.  $\nearrow$ 

You Press	You See
3 + 4 =	7
$8 \times 3 - 4 =$	20

# Operation Pennsylodly pro

- Repeatedly press
   ÷ or to move the
   cursor forward or
   backward.
- Enter the last two digits of the year.
   The year affects the day of the week.

#### Calculations

- This calculator follows standard and simple mathematical rules.
- To enter a negative number, press – then the number. Or, enter the number and press – then =.
   MINUS appears on the left side of the display.

- ☑ NOTE ☑
- Determine the approximate answer by counting the number of digits left of the decimal point. Put that many zeros to the right of the number and delete the decimal point. For example, if ERROR 3423.8381 appears, the approximate answer is 342,383,810,000.
- For multiplication, the calculator repeats the first number and ×. For other operations, the calculator repeats the operator and second number. For example, in  $5 \times 7$ ,  $5 \times$  is the constant. In the calculation 12 6, 6 is the constant.

### Percentage Calculations

To find a percentage of a number, type the number, then ×, the percentage, and %.

For example, to find 3 percent of 12:

You Press	You See
12 × 3 %	0.36

#### **ERRORS**

Your calculator displays **ERROR** if you:

- Try to divide by zero
- Perform a calculation that results in an answer greater than 99,999,999

To clear the error and continue the calculation with the displayed number, press **CE**. To clear the entire calculation and begin again, press **ON/AC**.

### CONSTANT CALCULATIONS

Press = to repeat the last function. For example, to calculate  $5 \times 5 \times 5 \times 5 + 2 + 2 = 629$ :  $\checkmark$ 

You Press	You See
5 × = = = + 2 = =	629

## MEMORY CALCULATIONS

To perform multi-step calculations:

- 1. Press **MRC** twice to clear the memory.
- Press M+ to total a calculation and add the total to the value in memory.
- 3. Press **M** to total a calculation and subtract

the total from the value in memory.

Press MRC to recall (display) the value in memory.

For example:  $(4 \times 5) + (28 + 2) - (7 - 2) + (75 \div 5)$ 

You Press	You See
4 × 5 M+	MEMORY 20
28 + 2 M+	MEMORY 30
7 – 2 M–	MEMORY 5
75 ÷ 5 M+	MEMORY 15
MRC	MEMORY 60

### ACCOUNT FUNCTIONS

The Bank Account Calculator's account functions make it easier than ever to track your checking, credit card, and saving account balances. It can keep up to 20 records for each account.


Calculations

MEMORY appears on the bottom left of the display when a value is stored in memory.

MEMORY disappears when you clear the memory.

**Account Functions** 

Add interest to your account as you would a deposit and subtract fees as you would a withdrawal.

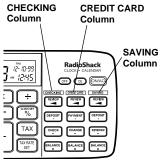

### **CHECKING**

To record a checking account deposit, enter the amount of the deposit, then press **DEPOSIT** in the CHECKING column.

To record a check, enter the amount of the check, then press **CHECK** in the CHECKING column.

To recall your checking account balance, press **BALANCE** in the CHECKING column.

To review from the last transaction record to the first one, repeatedly press REVIEW. REVIEW ENTRY#, the record number, and the record value appear.

#### **CREDIT CARD**

To record a credit card account payment, enter the amount of the payment, then press PAYMENT in the CREDIT CARD column.

To record a credit card account charge, enter the amount of the charge, then press **CHARGE** in the CREDIT CARD column.

To recall your credit card account balance, press BALANCE in the CREDIT CARD column.

To review from the last record to the first one, repeatedly press REVIEW in the CREDIT CARD column. REVIEW ENTRY#, the record number, and the record value appear.

#### **S**AVING

To record a savings account deposit, enter the amount of the deposit, then press **DEPOSIT** in the SAVING column.

To record a savings account withdrawal, enter the amount of the withdrawal, then press WITHDRAW in the SAVING column.

To recall your savings account balance, press **BALANCE** in the SAVING column.

To review from the last record to the first one, repeatedly press REVIEW in the SAVING column. REVIEW ENTRY#, the record number, and the record value appear.

# Tax Function:

### **TAX FUNCTIONS**

You can program the tax function to automatically add sales tax to your purchases.

- 1. Press **CE** or **ON/AC** to clear calculation.
- 2. Enter the value of the tax.
- 3. Press **TAX RATE SET** to set the value as tax rate.
- 4. Enter the cost value.
- 5. Press **TAX** to calculate the tax.
- 6. Press = to calculate the total cost.

For example, if your local sales tax rate is 5% and you purchase an item at \$120:

You Press	You See
5	5
Tax Rate Set	5
120 (cost value)	120
Tax	6
=	126

## REPLACING THE BATTERIES

Your 3 Memory Bank Account Calculator uses two 386A batteries for power. If the display dims, replace the batteries.

- 1. Make a note of the balance before you begin.
- 2. Make sure the calculator is off.
- 3. Place the calculator face down on a flat surface.
- 4. Use a small Phillips screwdriver to remove the



You must replace the batteries within one minute to retain all the balance records, date, and time.

☑ NOTE ☑

#### Care


Keep the calculator dry; if it gets wet, wipe it dry immediately. Use and store the calculator only in normal temperature environments. Handle the calculator carefully; do not drop it. Keep the calculator away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new. Modifying or tampering with the calculator's internal components can cause a malfunction and might invalidate its warranty. If your calculator is not

performing as it should, take it to your

local RadioShack

store for assistance.

screw securing the back cover and lift it off.

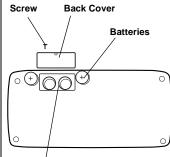

Battery Compartment

- 5. Use a straightened paper clip to pry out the old batteries.
- 6. Insert the new batteries positive (+) side up.
- 7. Replace the back cover and secure it with the screw.

### **SPECIFICATIONS**

Power SourceT	wo 386A Button-Cell Batteries
Battery Life	2160 Hours (continuous use)
Automatic Power-Off	5 Minutes
Working Temperature	
Storage Temperature	4° to 140°F (-20° to 60°C)
Dimensions (HWD)	$2^{3/4} \times 6 \times ^{3/8}$ inches $(70 \times 152 \times 10 \text{ mm})$
Weight (with Batteries)	6.1 oz. (173 g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

#### **Limited One-Year Warranty**

This product is warranted by RadioShack against manufacturing defects in material and work-manship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RADIOSHACK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law; (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products any but cuts may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged

for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facil-ity; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, ship-ping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

RadioShack Corporation Fort Worth, Texas 76102

65-504 A 07A02 Printed in China